

EM-1040 Drip Side Door Latch

www.electra-craft.com

If the door latch is not opening, please check to see if any coffee grinds are stuck in the latch. You should be able to press with your finger and it should engage and stay down and then when pressed again it should pop up. Be careful as the wings are delicate.

If it is not operating properly, you can replace it.



Either with the latch engaged or popped up, take a pair of pliers and pull straight up to remove the latch.



You can order a replacement at the below link

<http://store.electra-craft.com/em-1040-door-latch>